


MECHANISM EXPLODED VIEW

KSL-2101ABM

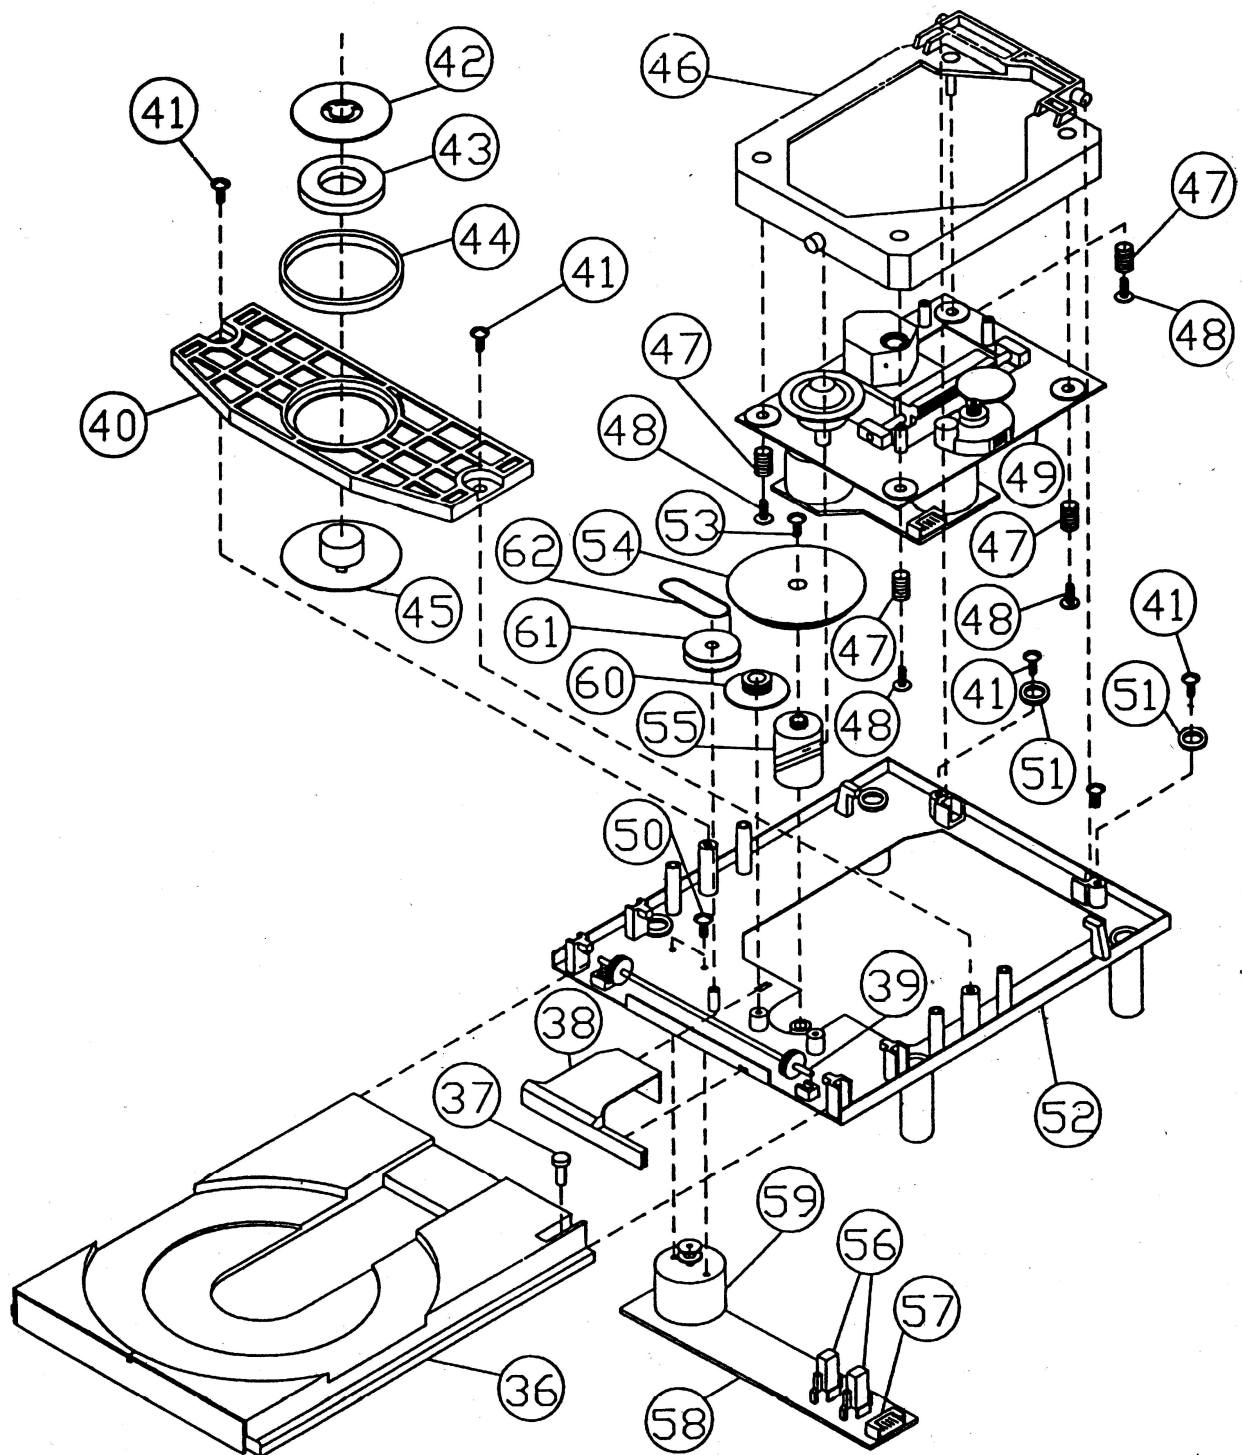


KSL-2101ABM SERVICE PARTS LIST

NO	PART NO	DESCRIPTION	Q'TY
36	2-626-009-(01)	TRAY (G)	1
37	THIS PART DOESN'T BELONG TO THE TRAY TAKE IT DOWN FROM OLD TRAY AND USE AGAIN WHEN CHANGING THE TRAY		
38	2-626-006-(01)	COVER (G), GEAR	1
39	2-625-998-(01)	GEAR (G), TRAY	1
40	2-626-004-(01)	PLATE (G) CHUCKING	1
41	2-319-501-(11)	SCREW +PTPWH 2.6 X 8	4
42	2-625-537-(01)	YOKE (S), CHUCKING	1
43	1-452-493-(21)	MAGNET	1
44	2-625-541-(01)	DAMPER (S)	1
45	2-626-002-(01)	PULLEY (G), CHUCKING	1
46	X-2625-379-(01)	CHASSIS A'SSY (G), SUB	1
47	2-625-539-(01)	SPRING (S)	4
48	2-644-410-(02)	WASHER BASED SCREW	4
49	KSM-2101ABM	DRIVE UNIT	1
50	2-625-279-(01)	SCREW +B2.6 X 16	2
51	3-464-123-(02)	SPACER	2
52	2-626-010-(01)	CHASSIS (G), OUTSERT MAIN	1
53	3-319-501-(51)	SCREW +PTPWH 2.6 X 16	1
54	2-626-003-(02)	GEAR (G), DRIVE	1
55	2-626-005-(03)	CAM (G), CONTROL	1
56	1-572-086-(11)	SWITCH, LEAF	2
57	1-564-721-(11)	PIN, CONNECTOR 5P	1
58	1-640-523-(11)	PC BOARD, LOADING	1
59	X-2625-117-(01)	MOTOR A'SSY, LOADING	1
60	2-625-999-(01)	GEAR (G), MIDWAY	1
61	2-625-997-(01)	PULLEY (G) LOADING	1
62	3-653-387-(01)	BELT, LM	1

MECHANISM EXPLODED VIEW

KSL-2101ABM

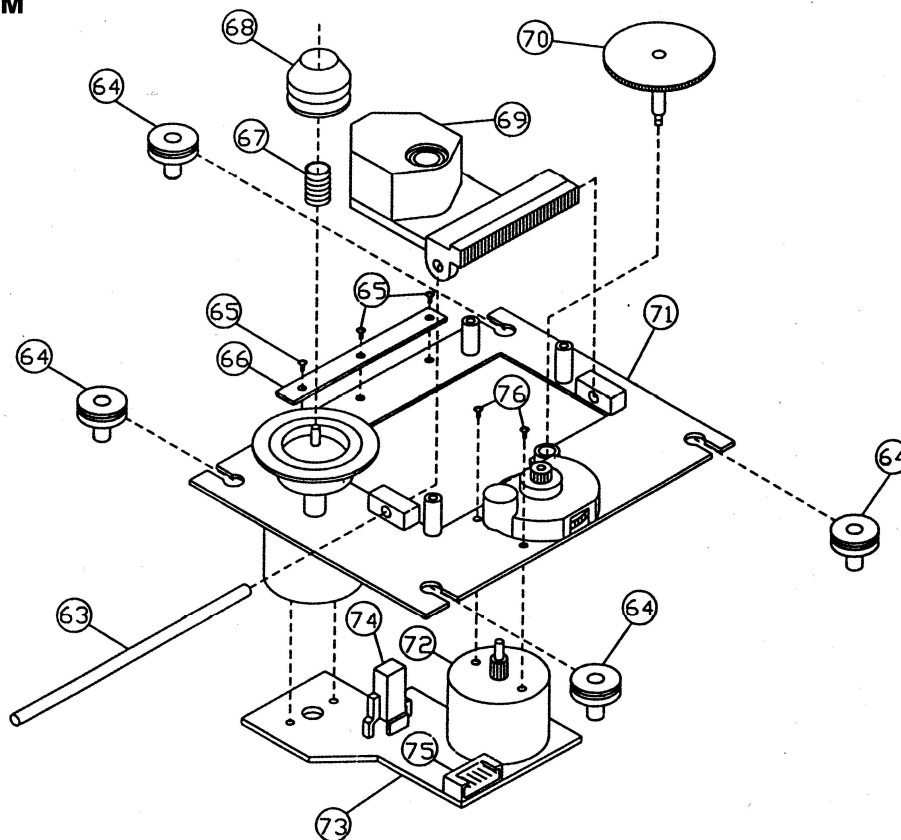

KSL-2101ABM SERVICE PARTS LIST

NO	PART NO	DESCRIPTION	Q'TY
63	2-625-464-(01)	SHAFT (S), SLED	1
64	2-625-538-(01)	INSULATOR (S)	4
65	2-641-386-(01)	SCREW (2 X 5), TAPPING (S)	3
66	2-625-625-(01)	REINFORCEMENT (S)	1
67	2-625-465-(01)	SPRING (S) COMPRESSION	1
68	2-625-477-(01)	RING (LO) (S), CENTER	1
✓69	8-848-127-(31)	PICK UP KSS-210A (S) (RP)	1
70	2-625-462-(01)	GEAR (A) (S)	1
71	X-2625-133-(2)	CHASSIS A'SSY (MB), TT WITH DISC MOTOR & TABLE	1
72	X-2625-132-(1)	GEAR A'SSY (MB), MOTOR	1
73	X-639-678-(12)	PC BOARD, MOTOR (GP) (S)	1
74	1-572-085-(12)	SWITCH LEAF	1
75	1-564-722-(11)	PIN CONNECTOR GP	1
76	7-621-255-(15)	SCREW +P2 X 3	2