



Xbox 360 Interactive Kiosk Control Pack DIP Switch Settings			
Updated 04/18/07	KEY: 0=DOWN 1=UP		
Region	Retailer	Code	
North America	DEFAULT (English)	01000000	NOTE: The final TWO settings (9th and 10th, not shown in this grid) limit the length of play per session. Please refer to the schematic on top of the Medusa for the switch settings.
North America	DEFAULT (Spanish)	01000001	
North America	No MU	01000010	
North America	BestBuy	01001000	
North America	BestBuy spanish	01001001	
North America	Wal-Mart	01001011	
North America	Wal-Mart spanish	01001100	
North America	Gamestop (EB)	01001110	(Use this setting in ALL other GameStop Chain stores INCLUDING EB)
North America	Gamestop (EB) spanish	01001111	
North America	Game Crazy	01011110	
North America	Circuit City	01010001	
North America	Circuit City spanish	01010010	
North America	Target	01010100	
North America	Target spanish	01010101	
North America	Toys R Us	01010111	
North America	Toys R Us spanish	01011000	
North America	Comp USA	01011010	
North America	Comp USA spanish	01011011	

