

NRリーダー取扱説明書

注意事項

■ NRリーダーのレンズをのぞきこまない

レンズは絶対にのぞきこまないでください。ディスクを読むためのレーザー光が目に入ると視力障害を起こすことがあります。

■ NRリーダーのレンズが赤く発光していたら…

NRリーダーのディスクカバーを開けた状態でレンズが赤く発光している場合は、すぐに電源をOFFにし、ACアダプタのACプラグをコンセントから抜いて、任天堂株式会社あるいは販売窓口までご相談ください。

■ 故障と思われる場合

NRリーダーは精密な電子部品で構成されていますので絶対に内部を開けないでください。故障と思われる場合は、任天堂株式会社あるいは販売窓口までお問い合わせください。

■ NRリーダーで使えるディスク

NRリーダーで使えるディスクは開発用ディスク (NR DISC) のみです。量産品ディスク (家庭向けに販売されるディスク) は動作しません。

■ 専用のACアダプタを使用する

付属のACアダプタ以外は使用しないでください。

NRリーダー各部の機能

パワーボタン(POWER)


リセットボタン(RESET)

JPN/USA切替スイッチ

レンズ

オープンボタン(OPEN)

ディスクリリースボタン(PUSH)

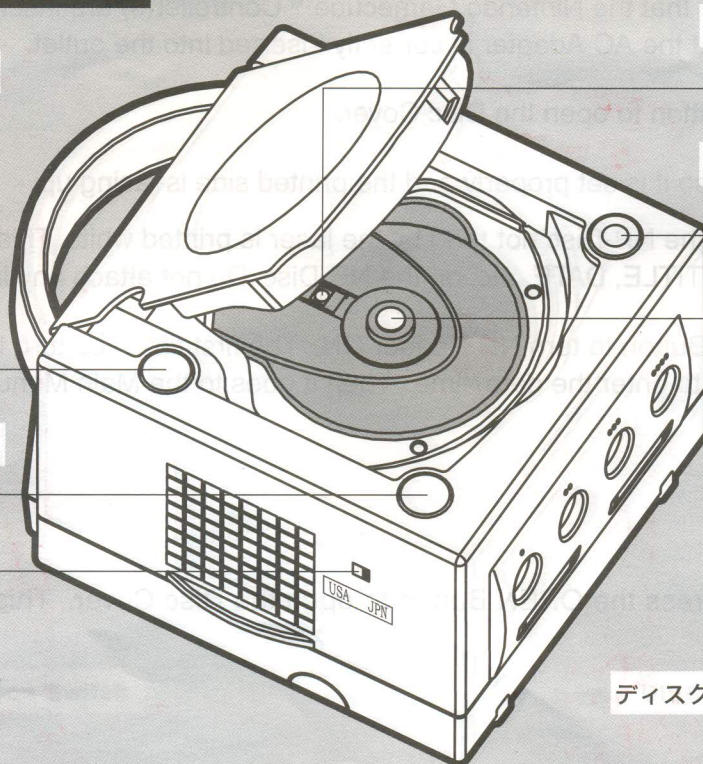

■ パワーボタン (POWER) / リセットボタン (RESET) / オープンボタン (OPEN)

パワーボタンは本体上面の左上にあります。リセットボタンは本体上面左下にあります。
オープンボタンは本体上面の右下にあります。

■ ディスクリリースボタン (PUSH)

このボタンを押すとディスクを取り出すことができます。ディスクの回転が止まっている状態でこのボタンを押してください。

【参考】 本体の電源がONの状態のまま、オープンボタンを押してディスクカバーを開けると、ディスクの回転を強制的に止めることができます。

■ JPN / USA (仕向地) 切替スイッチ

本体側面にあるこのスイッチを切り替えることで、仕向地に合わせたIPLに切り替えることができます。電源を切った状態で切り替えてください。

■ ゲームを始める場合

1. テレビの電源をONにしてください。
2. テレビの入力切り換えを、NRリーダーを接続したビデオ入力画面に切り換えてください。
3. NRリーダー本体にコントローラのプラグが正しく接続されているか、コンセントにACアダプタのACプラグが正しく接続されているか確認してください。
4. オープンボタンを押して、ディスクカバーを開けてください。
5. ディスクのレーベル面を上にして、しっかりとセットしてください。
6. パワーボタンを押して電源をONにしてください。初めて電源をONにしたときは、日付・時刻の設定をしていただくための画面が表示され、メインメニューに移動します。

■ ゲームを終了する場合

本体の電源がONの状態のまま、オープンボタンを押してディスクカバーを開けてください。これはディスクの回転を強制的に止めるためです。

■ 注意

この取扱説明書に規定した以外の手順による使用は、危険なレーザー放射の被ばくをもたらします。

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

【レーザー光源の仕様】

レーザーの種類：半導体レーザー
レーザー波長：668nm (typ.) (658nm～678nm)
対物レンズ射出光：MAX. 0.8mW
開口率：0.6

クラス1レーザー製品

NR Reader User's Manual

WARNING

■ WARNING! - Laser Device

This device is a Class I laser product. Do not attempt to disassemble the NR Reader. Refer servicing to qualified personnel only.

Caution - Use of controls or adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

Laser Specification

Laser Type: Semiconductor Laser

Laser Wavelength: 668nm(typ.) (658nm~678nm)

Laser Output: MAX. 0.8mW


Numeric Aperture: 0.6

■ NOTE:

Only NR-Discs can be used with the NR Reader. Mass produced Nintendo GameCube™ Game Discs will not operate.

How to Operate

Various Functions of NR Reader

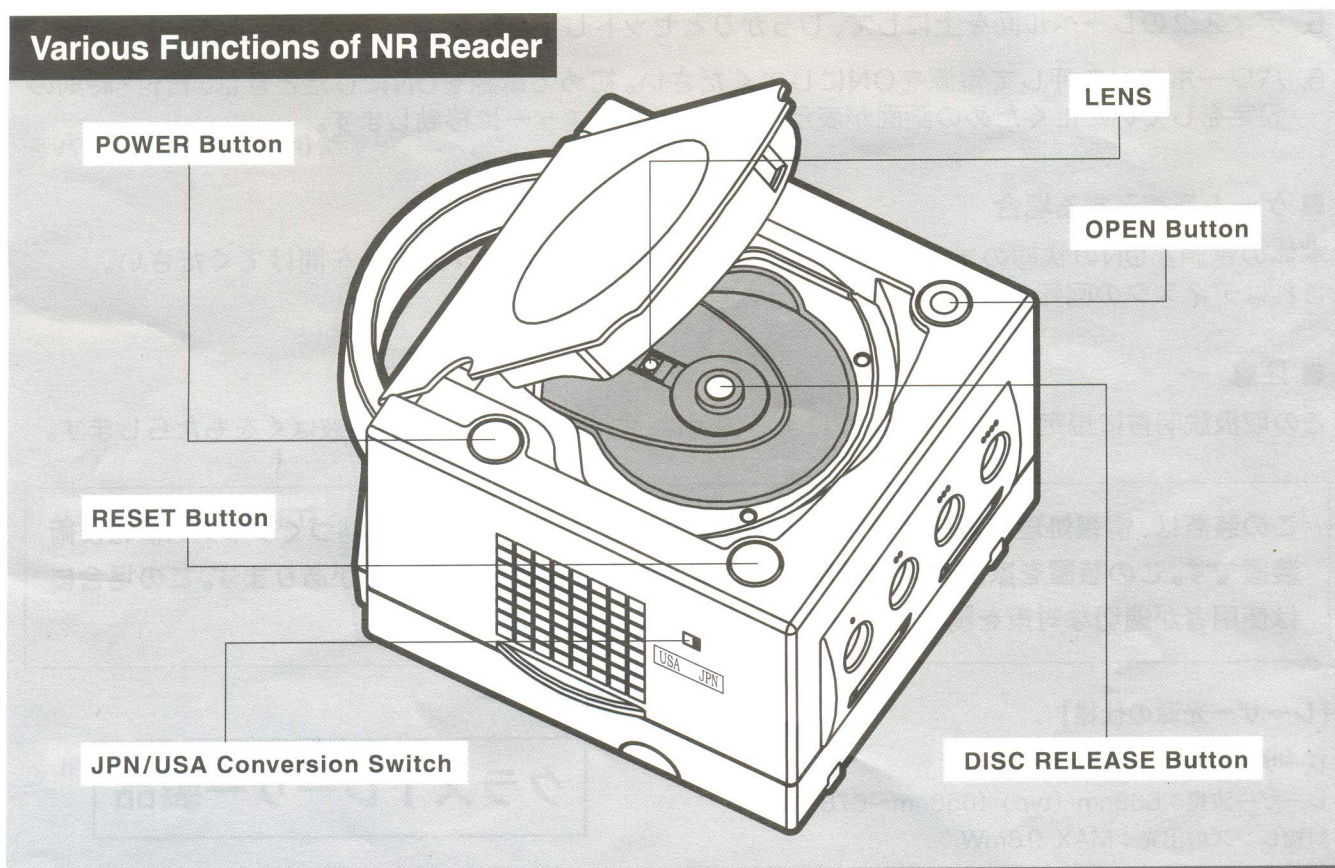

■ POWER Button/RESET Button/OPEN Button

The POWER Button is on top of the NR Reader, in the upper left. The RESET Button is on top of the NR Reader, in the lower left. The OPEN Button is on top of the NR Reader, in the lower right.

■ DISC RELEASE Button

Press this button to release the NR-Disc. Press when the NR-Disc is not spinning.

[Note] When the power to the NR Reader is ON and you open the Disc Cover, the NR-Disc will stop spinning.

■ JPN/USA (Destination) Conversion Switch

By changing this switch on the side of the NR Reader, you can change to the initial program loader (IPL) for the particular destination. Use this switch when the power is OFF.

■ Starting a Game

1. Turn the power to the TV to ON.
2. Change the TV's input switch to the video input screen to which the NR Reader is connected.
3. Check to make sure that the Nintendo Gamecube™ Controller(s) are inserted correctly into the NR Reader, and that the AC Adapter is correctly inserted into the outlet.
4. Press the OPEN Button to open the Disc Cover.
5. Insert the NR-Disc so it is set properly and the printed side is facing up.

[Note] The side of the NR-Disc not read by the laser is printed white. This allows you to use a felt pen to write the TITLE, DATE, etc. on the NR-Disc. Do not attach any labels to the NR-Disc.

6. Press the POWER Button to turn NR Reader ON. The first time you turn the power ON a screen is displayed for you to enter the date/time. Then it goes to the Main Menu.

■ Ending a Game

With the power ON, press the OPEN Button to open the Disc Cover. This will stop the NR-Disc from spinning.